



Durofix RV332 Motor Replacement

This guide will instruct how to properly replace a defective screwdriver motor for the Durofix RV332 Cordless Li-ion Screwdriver.

Written By: Tyler Vincent





TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Soldering Station](#) (1)
- [Wire cutters/side cutters](#) (1)
- [Solder](#) (1)



PARTS:


- [Replacement Durofix RV332 electric motor](#) (1)

Step 1 — Screwdriver Motor




- Remove the six 13 mm case screws with philips #0 screwdriver.

Step 2

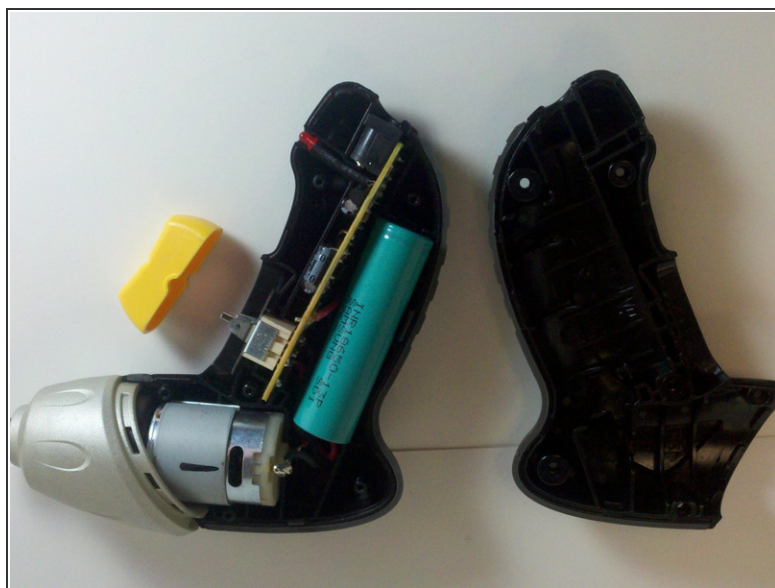


- Use the plastic separating tool to separate the casing halves of the cordless screwdriver.

Step 3

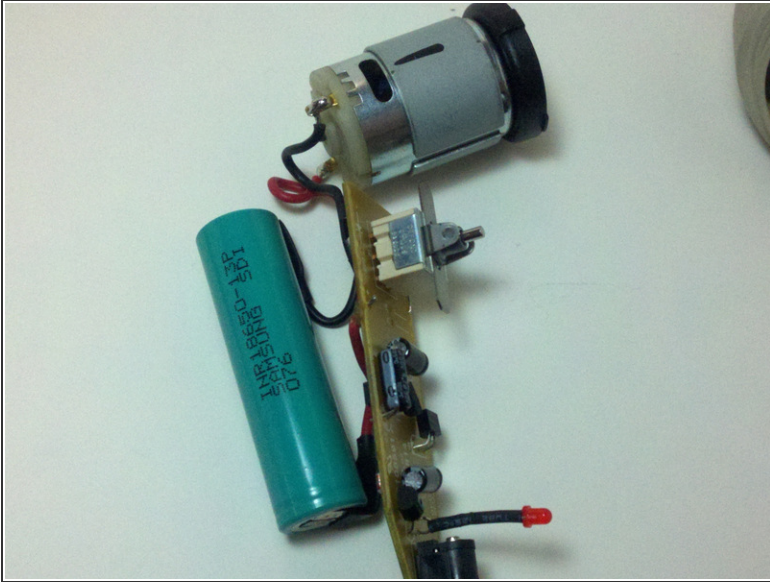


- Once the screwdriver casings have been separated, remove the printed circuit board, battery, LED, and motor assembly from the screwdriver casing.
- Using the wire cutters, cut the black and red motor wires where they connect to the motor.

Step 4

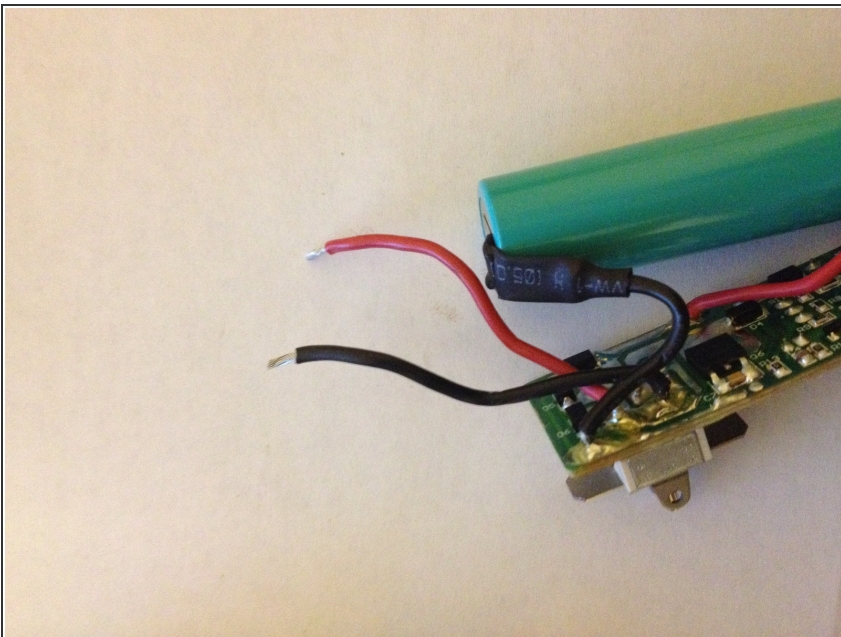


- Strip the ends of the wires clean with the wire cutters. Strip the wire insulation 1/4" from the end of the wire.

Step 5

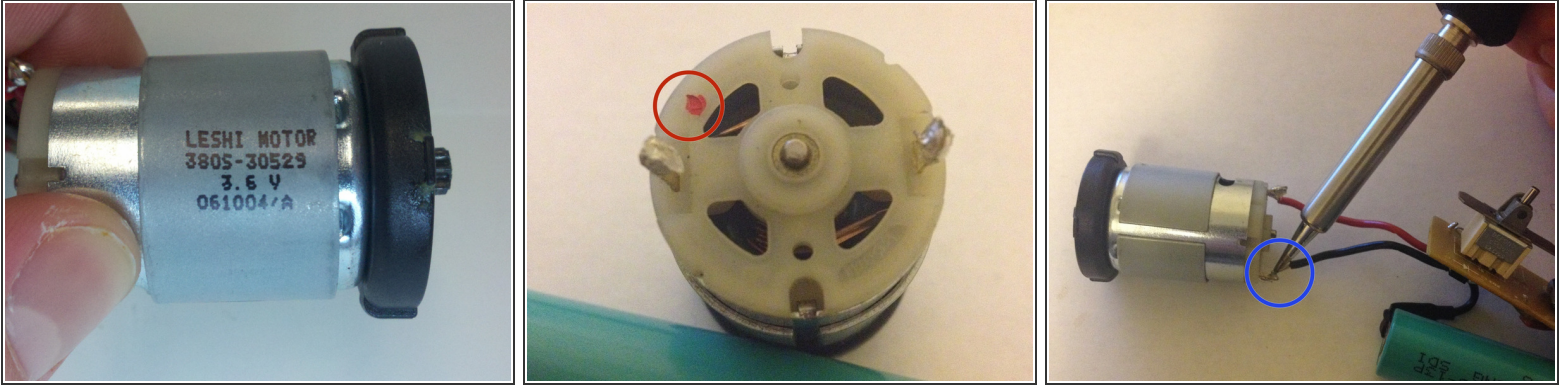

- Ensure the new motor terminals are clean before soldering.
 - Solder the red wire to the positive motor terminal, designated by a plus sign with a red circle around it.
 - Solder the black wire to the other terminal of the motor.
- ⚠ Allow the newly soldered assembly to cool before continuing.

Step 6

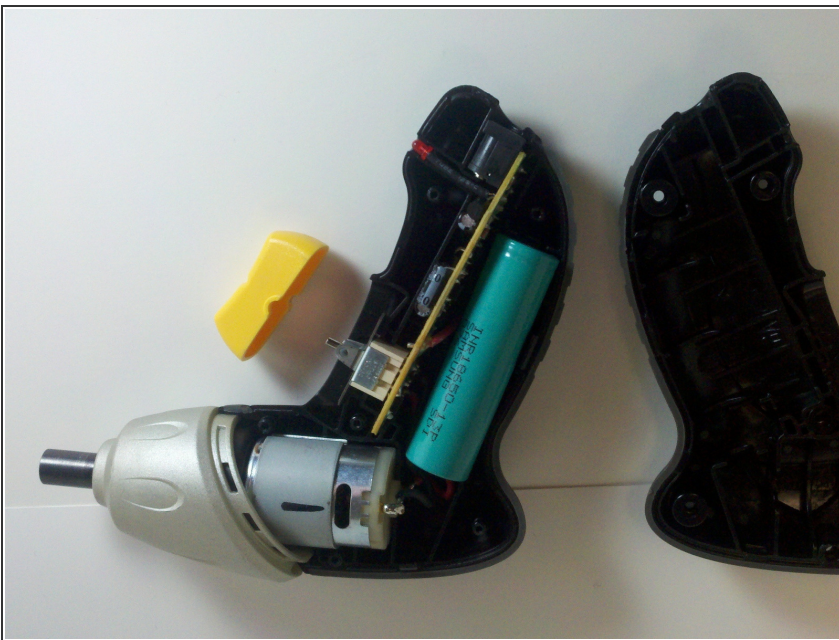

- Once the motor has cooled, replace the motor, printed circuit board, LED, and battery inside the screwdriver casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 02:45:37 PM.